Panel 2, Inside front cover

Panel 3, Inside back cover

BASIC TELEPHONE FEATURES

Turn Handset on

C

Turn Handset off

C

Off

Make a call

Answer a call

End a call

Last number redial

Menu

24

Last number
4000
4001

DIRECTORY DIALING

Private dir.
Search

Thibodeau
Ken

Call

DIRECTORY NUMBER STORING

Add

Choose mem
0 to 9 : x
OK

Enter number
Erase
OK

Enter number
OK

BASIC TELEPHONE FEATURES

Low battery

Recharge
the battery

Battery 2 mn

Ringer off

87
Ringer volume
0

Ringer on

87
Ringer volume
1 2 3 4

Volume up

Volume down

Fold

TO USE THE C4010 Ex SAFELY

Never take the C4010 Ex out of the carry case in an explosive atmosphere

Never use accessories
For example, do not use the belt clip

Never charge the battery in an explosive atmosphere

Never use another type battry

Never use in mining environments

A0801670

Panel 4, back cover

C4010 Ex
Quick Reference Card

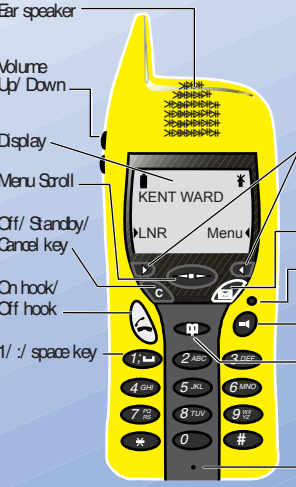

Important: Only use the handset in the carry case.
Only charge the handset in designated areas.

For additional information on the operation of your handset, consult the C4010/4020 User Guide

Panel 1, front cover